### **WS-86 No Touch Exit Switch**

# Contactless Hand Wave Sensor Switch Button



WS-8

#### What is Hand Wave Sensor Button?

Hand Wave Sensor Button It is activated by hands waving.

After correctly connected this sensor with your power supply and access control system, when you wave your hand at the sensor, the door will turn on automatically.

## **Specifications**

S4A Model No.	WS-86	Output Contact	NO NC
Dimension	86x86x11.5mm	Transmit Distance	5~8cm
Panel Material	Tempered glass	Mechanical Life	1000000 tested
Input Voltage	DC12-24V	Backlight State	Blue to green

#### **Dimensions**



